
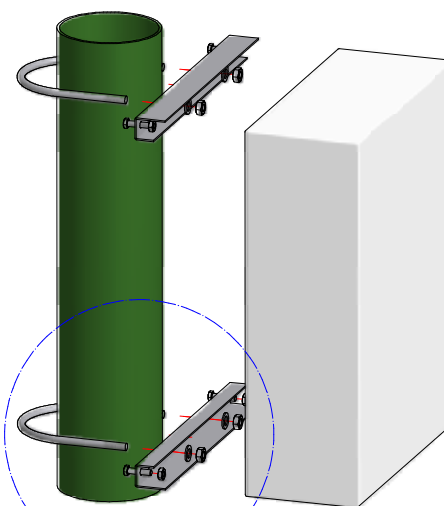
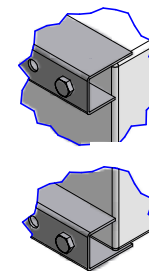
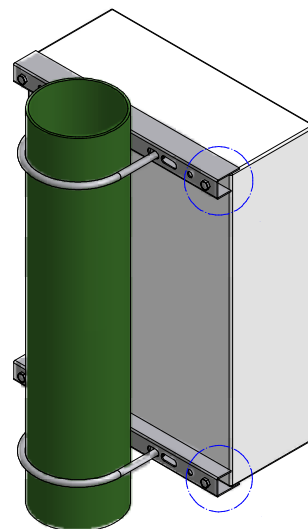
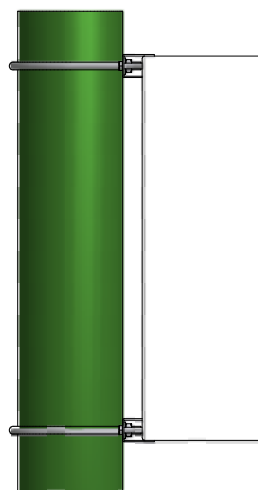


MONTERINGSANVISNING FOR SKAPFESTE

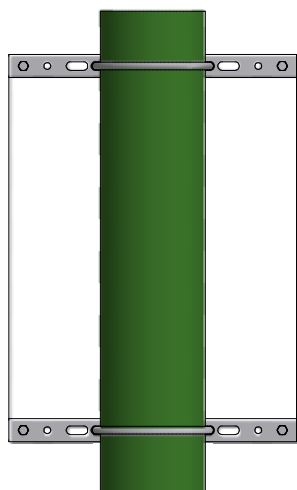


- Klammer for $\varnothing 194$ (3490015)
- Klammer for $\varnothing 219$ (3490016)
- Klammer for $\varnothing 273$ (3490017)
- Klammer for $\varnothing 324$ (3490018)

Festebolt for skap M12x60 med mutter M12 (4012061 + 4912008)

Skapfeste universal L=600mm (3490011)

Rund skive M16 (4816001)

Mutter M16 (4916008)

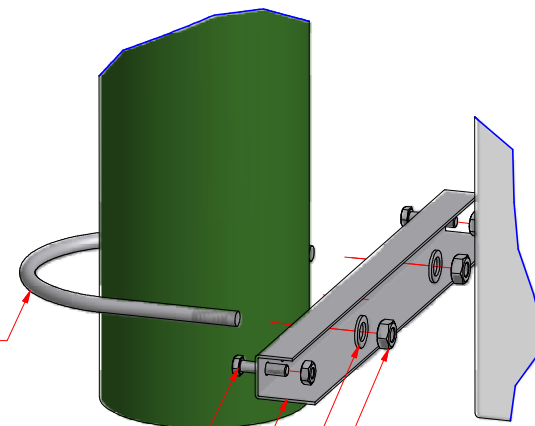

Dato	Konstr./Tegnet	Målestokk		
12.05.2009	vbirkeland	A3 - 1:10		
Beregning	Godkjent		L-0285	
Monteringsanvisning Skapfeste til mast $\varnothing 194/\varnothing 219/\varnothing 273/\varnothing 324$				Revisjon
Henvising:		Erstatning for	Erstattet av	Denne tegning er vår eiendom og må ikke, uten vårt samtykke, brukes, kopieres eller mot våre interesser gjøres tilgjengelig for andre.